

## DIAGNOSTIC TROUBLE CODE CHART

### HINT:

- Using SST 09843-18040, connect terminals Tc and CG of the DLC3.
- If no abnormality is found in inspection parts, inspect the ECU.
- If a malfunction code is displayed during the DTC check, check the circuit listed for the code. For details of each code, refer to the "See page" under respective "DTC No." in the DTC chart.

DTC No. (See page)	Detection Item	Trouble Area
C0200/31 (DI-374)	Right front wheel speed sensor signal malfunction	• Right front, left front, speed sensor • Speed sensor circuit
C0205/32 (DI-374)	Left front wheel speed sensor signal malfunction	• Sensor installation • Speed sensor rotor
C0210/33 (DI-379)	Right rear wheel speed sensor signal malfunction	• Right rear or left rear speed sensor • Sensor installation
C0215/34 (DI-379)	Left rear wheel speed sensor signal malfunction	• Each speed sensor circuit • Speed sensor rotor
C0226/21 (DI-384)	Open or short circuit in 2-position solenoid circuit for right front wheel	• ABS actuator • SFRH or SFRH circuit
C0236/22 (DI-384)	Open or short circuit in 2-position solenoid circuit for left front wheel	• ABS actuator • SFLR or SFLH circuit
C0246/23 (DI-384)	Open or short circuit in 2-position solenoid circuit for right rear wheel	• ABS actuator • SRRR or SRRH circuit
C0256/24 (DI-384)	Open or short circuit in 2-position solenoid circuit for left rear wheel	• ABS actuator • SRLR or SRLH circuit
C0273/13 (DI-386)	Open circuit in ABS motor relay circuit	• ABS motor relay • ABS motor relay circuit
C0274/14 (DI-386)	Short circuit in ABS motor relay circuit	
C0278/11 (DI-388)	Open circuit in ABS solenoid relay circuit	• ABS solenoid relay • ABS solenoid relay circuit
C0279/12 (DI-388)	Short circuit in ABS solenoid relay circuit	
C1235/35 (DI-374)	Foreign matter is attached on the tip of the right front sensor	• Right front, left front, right rear or left rear speed sensor • Each speed sensor circuit • Speed sensor rotor
C1236/36 (DI-374)	Foreign matter is attached on the tip of the left front sensor	
C1238/38 (DI-379)	Foreign matter is attached on the tip of the right rear sensor	
C1239/39 (DI-395)	Foreign matter is attached on the tip of the left rear sensor	
C1241/41 (DI-390)	Power source voltage down	• Battery • Charging system • Power source circuit
C1249/49 (DI-393)	Open circuit in stop light switch circuit	• Stop light switch • Stop light switch circuit
C1251/51 (DI-395)	Pump motor is locked	• ABS pump motor
Always ON (DI-397)	Malfunction in ECU	• Charging system • ABS warning light circuit • Battery • Skid Control ECU