


TERMINALS OF ECU

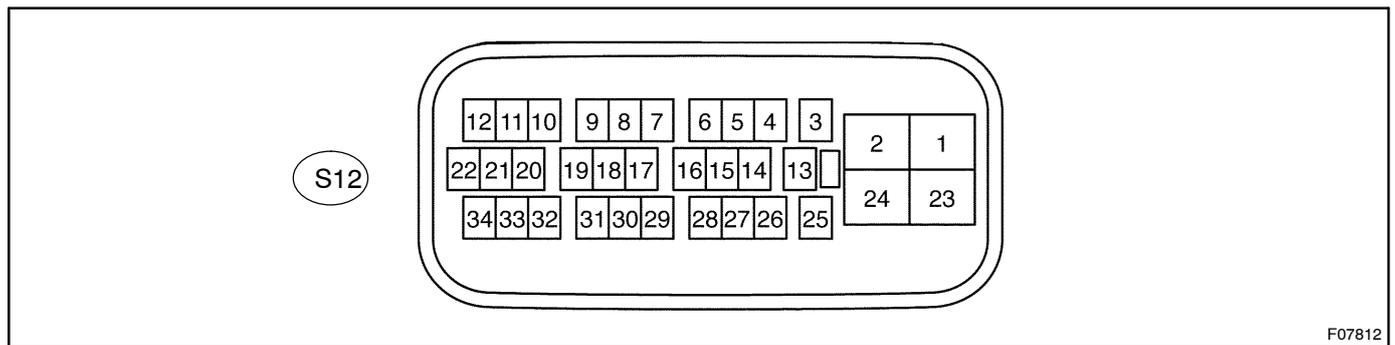

F07812

Symbols (Terminal No.)	Wiring Color	Condition	STD Voltage (V)
+BS (S12-1) - GND (S12-2, 24)	R - W-B	Always	11 - 14
FL+ (S12-9) - FL- (S12-8)	L - Y	IG switch ON, slowly turn left front wheel	AC generation
STP (S12-10) - GND (S12-2, 24)	G-W - W-B	Stop light switch ON	10 - 14
		Stop light switch OFF	Below 1.0
RL+ (S12-11) - RL- (S12-12)	Y - BR	IG switch ON, slowly turn left rear wheel	AC generation
WA (S12-13) - GND (S12-2, 24)	R-G - W-B	IG switch ON, ABS warning light ON	10 - 14
		IG switch ON, ABS warning light OFF	Below 2.0
D/G (S12 - 14) - GND (S12-2, 24)	W-G - W-B	IG switch ON	10 - 14
Ts (S12 - 15) - GND (S12-2, 24)	G-R - W-B	IG switch ON	10 - 14
Tc (S12-16) - GND (S12-2, 24)	P-B - W-B	IG switch ON	10 - 14
PKB (S12-18) - GND (S12-2, 24)	B-W - W-B	IG switch ON, parking switch ON	Below 1.0
		IG switch ON, parking switch OFF	10 - 14
+BM (S12-23) - GND (S12-2, 24)	R - W-B	Always	11 - 14
IG1 (S12-25) - GND (S12-2, 24)	B-R - W-B	IG switch ON	10 - 14
FR+ (S12-31) - FR- (S12-30)	R - G	IG switch ON, slowly turn right front wheel	AC generation
RR+ (S12-33) - RR- (S12-34)	B - W	IG switch ON, slowly turn right rear wheel	AC generation