

Caliper clearance template for Wilhelm Raceworks Stoptech big brake kit.


Instructions:

1. Print at 1:1 scale. Measure 6" line at right to confirm scale is correct.
2. Cut out along bold lines
3. Fit wheel center protrusion into wheel center bore (use hubcentric ring if necessary)

6"

Fit in wheel center bore

FRONT BRAKES STOPTECH CALIPERS

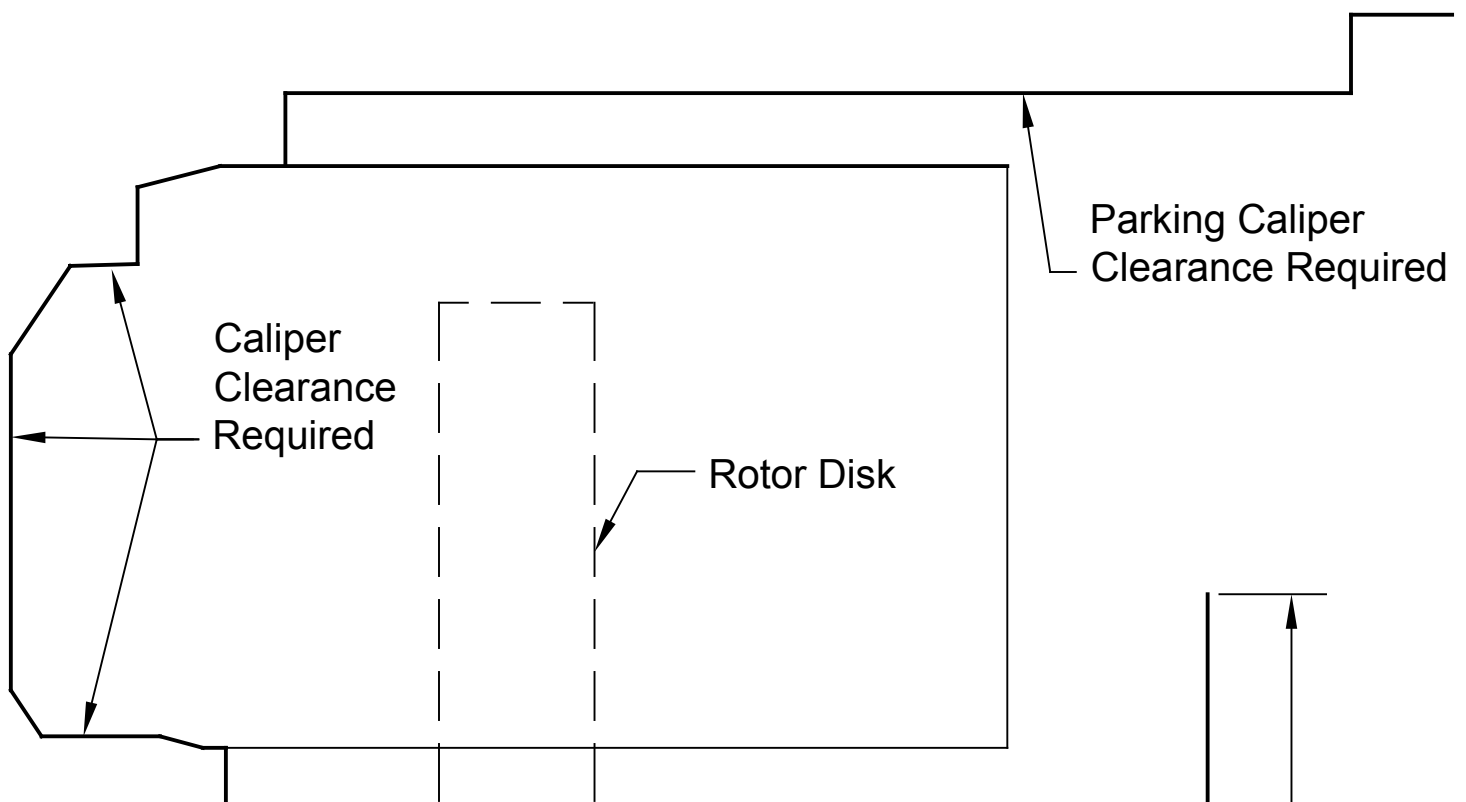

Caliper clearance template for Wilhelm Raceworks Stoptech big brake kit.

Instructions:

1. Print at 1:1 scale. Measure 6" line at right to confirm scale is correct.
2. Cut out along bold lines
3. Fit wheel center protrusion into wheel center bore (use hubcentric ring if necessary)

Fit in wheel center bore

6"

REAR BRAKES STOPTECH CALIPERS