
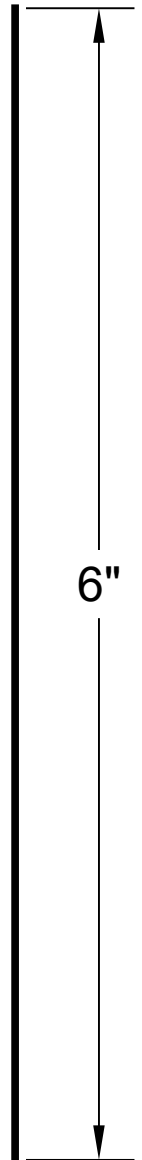



Caliper clearance template for Wilhelm RaceWorks Ultralite big brake kit.

Instructions:

1. Print at 1:1 scale. Measure 6" line at right to confirm scale is correct.
2. Cut out along bold lines
3. Fit wheel center protrusion into wheel center bore (use hubcentric ring if necessary)

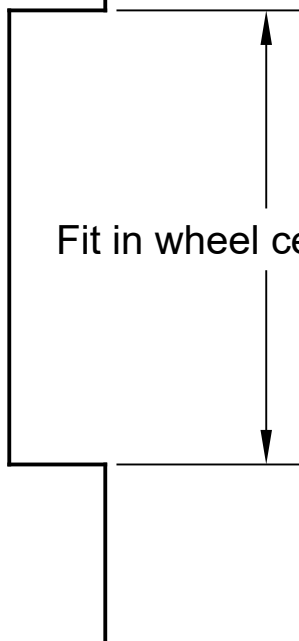



**FRONT BRAKE  
FNDL CALIPER**

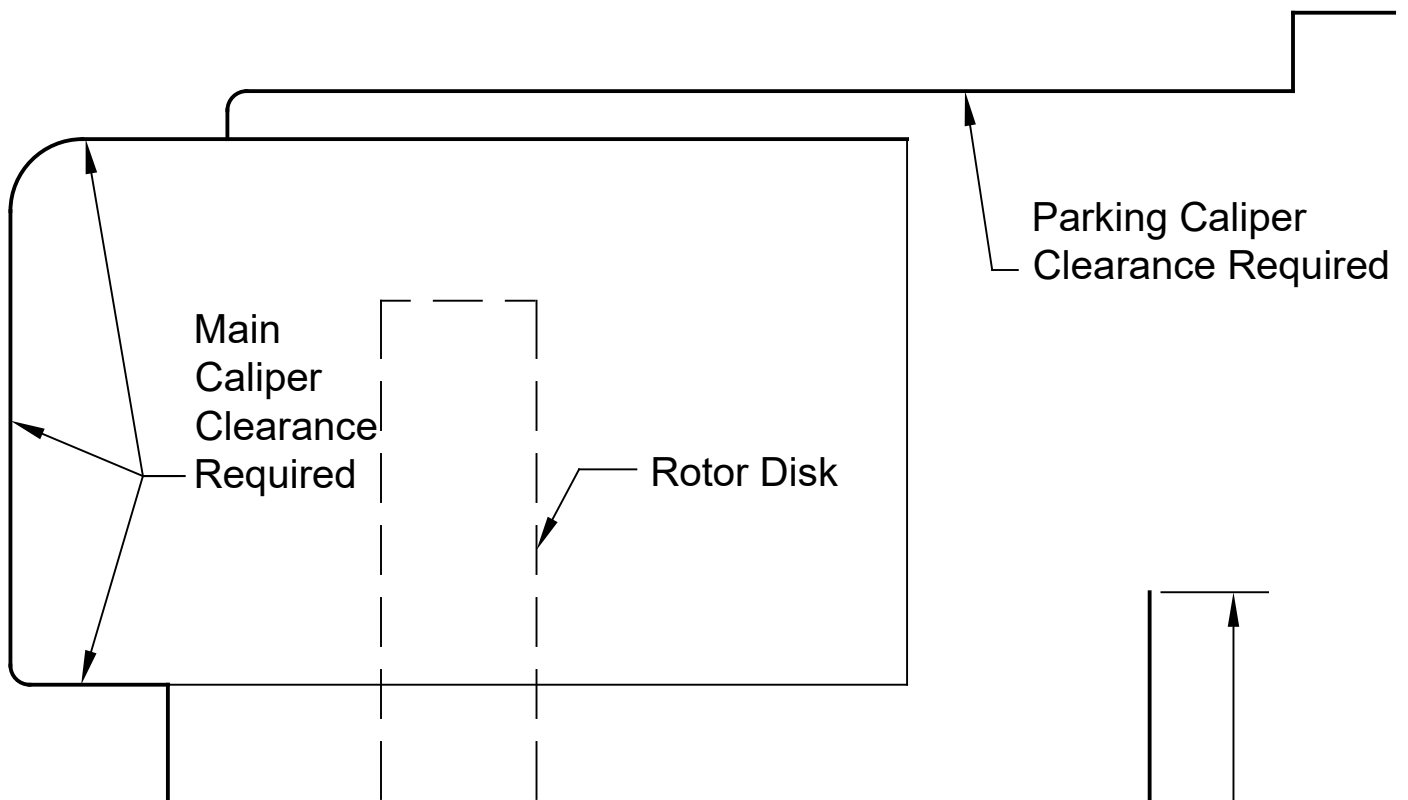

Caliper clearance template for  
Wilhelm Raceworks Ultralite big brake  
kit.

Instructions:

1. Print at 1:1 scale. Measure 6" line at right to confirm scale is correct.
2. Cut out along bold lines
3. Fit wheel center protrusion into wheel center bore (use hubcentric ring if necessary)

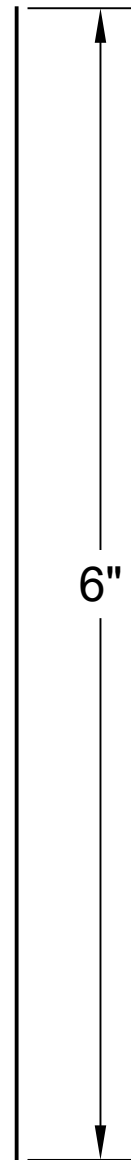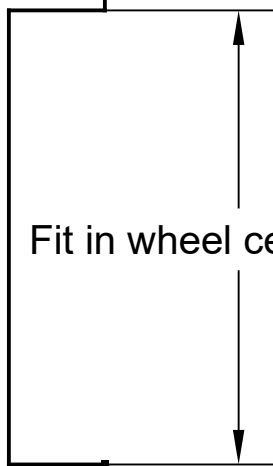

**REAR BRAKES  
FNDL CALIPERS**